









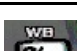


NIKON D70 CHEAT SHEET

The material below is a Nikon D70 “cheat sheet”. It contains a listing of 12 of the parameters that users may often want to change while shooting, and the “quick” route to do this. While the D70 can access just about everything from the menu process, using these shortcut approaches is quicker and easier. I have numerous different cameras, and associated devices, and it often gets confusing trying to remember which keys are for the various cameras. Using this “cheat” sheet can make things easier.

HOW TO USE THS MATERIAL

Print out this page in color, on a heavy stock, or plain paper. Then trim around the edges of the table below. Next, either cut it apart in the middle, or fold it over at that point. For heavy stock, I recommend cutting. For regular paper, folding is OK also. Then I use some adhesive to glue them together, back to back. When the adhesive has dried, I laminate them in my Brother LX-900 Coollaminator. I now have a convenient sized card which will stand some wear and tear, and which I can carry with me, or in my camera bag. *NOTE: If you use a color laser printer, you can do the gluing and laminating right away. If you use an inkjet printer, let the ink dry fully before proceeding.*

| Nikon D70 - Task Description | Path to Accomplish Task |
|---|--|
| Set Aperture (M & A Mode) | Rotate sub command dial. To see effects in LCD, lightly press shutter release |
| Change ISO Setting | Press ISO button & use main command |
| Exposure Bracketing |  Sub command for Δ exposure Main command for # of frames |
| Exposure Compensation |  + Rotate main command dial |
| Flash Mode |  + Rotate main command dial |
| Flash Compensation |  + Rotate sub-command dial |
| Help - when in “Menu Mode” |  Press for help & info |
| Nikon D70 - Task Description | Path to Accomplish Task |
| Image Quality |  + Rotate main command dial |
| Metering Mode |  + Rotate main command dial |
| Program Mode Flexibility | Use main command dial to change shutter & aperture for same EV. To see in LCD, lightly press shutter. |
| Shooting Mode/Self Timer/Remote |  + Rotate main command dial |
| Set Shutter Speed (M & S Mode) | Rotate main command dial. To see effects in LCD, lightly press shutter release. |
| Format Card |  and  Hold 2 buttons down for 2 sec. When Blinkg “for” shows-press both again. |
| White Balance |  + Rotate main command dial |